

## Betriebs-Räumwerkzeuge Kerbzahnungen DIN 5481

Nummer	Abmessung	Räumlänge (mm)	Vorbohrm./ Durchmesser	Anz. Züge
LR 0403	7 x 8; z = 28; EW 60°	8 - 20	7,1 H 8	1
LR 0102	8 x 10; z = 28; EW 60°	10 - 25	8,3 H 8	
LR 0102	8 x 10; z = 28; EW 60°	10 - 25	8,3 H 8	
LR 0109	10 x 12; z = 30; EW 60°	10 - 25	10,2 H 8	1
LR 0712	10x12 DIN5481	16-24	10,4 H8	1
LR 0713	10x12 DIN5481	16-24	10,4 H8	1
LR 0402	12 x 14; z = 31; EW 60°	12 - 35	12,25 H 8	1
LR 0438	12 x 14	12 - 25	12,35 H 8	1
LR 0395	12 x 14; z = 31; EW 60°	14 - 35	12,1 H 8	1
LR 0208	15 x 17; z = 32; EW 60°	14 - 35	15 H 8	1
LR 0123	15 x 17; z = 32; EW 60°	14 - 40	15,2 H 8	1
LR 0140	17 x 20; z = 33; EW 60°	14 - 40	17,6 H 8	
LR 0120	21 x 24; z = 34; EW 60°	18 - 45		1
LR 0003	21 x 24; z = 34; EW 60°	16 - 45	21,1 H 7	
LR 0174	21 x 24; z = 34; EW 60°	16 - 45	21,1 H 8	
LR 0206	26 x 30; z = 35; EW 60°	18 - 50	26,75 H 8	1
LR 0361	26 x 30; z = 35; EW 60°	18 - 45	26,75 H 8	1
LR 0538	26 x 30	25 - 50	26,8 H 8	1
LR 0313	30 x 34; z = 36; EW 60°	28 - 70	30,8 H 8	
LR 0550/1 LR 0550/2	30 x 34;	36 - 152	30,8 H 8	2
LR 0118	30 x 34; z = 36; EW 60°	20 - 50	30,8 H 8	1
LR 0106	36 x 40; z = 37; EW 60°	20 - 60	36,2 H 8	1
LR 0115	30 x 34; z = 36; EW 60°	20 - 60	30,6 H 8	1
LR 0122	45 x 50; z = 39; EW 60°	24 - 70	45,2 H 8	1
LR 0711	45x50 DIN5481	24-70	45,2 H8	1
LR 0126	50 x 55; z = 40; EW 60°	24 - 60	50,3 H 8	1
LR 0127	55 x 60; z = 42; EW 60°	28 - 75	55,2 H 8	1